




INSTALLATION INSTRUCTIONS HELIUM

INSTALLATION INSTRUCTIONS


1. Opening

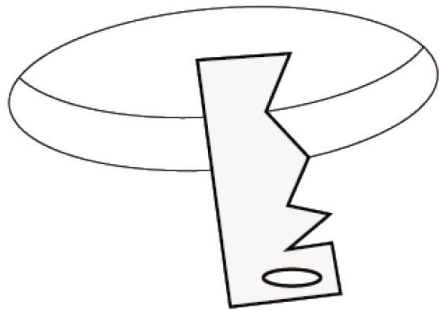

2.

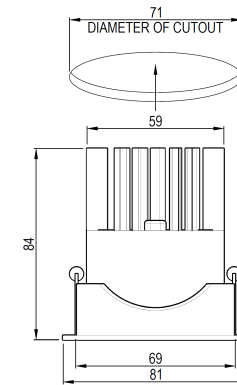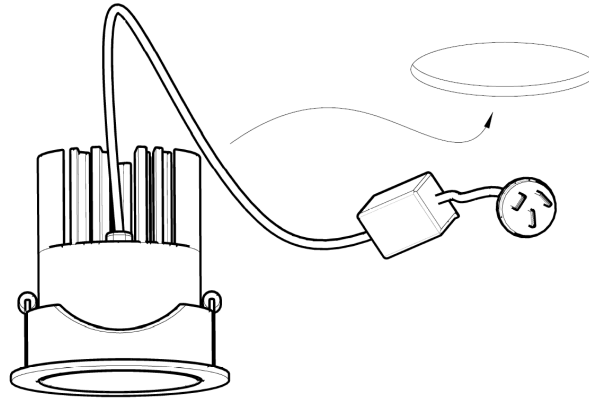


3.

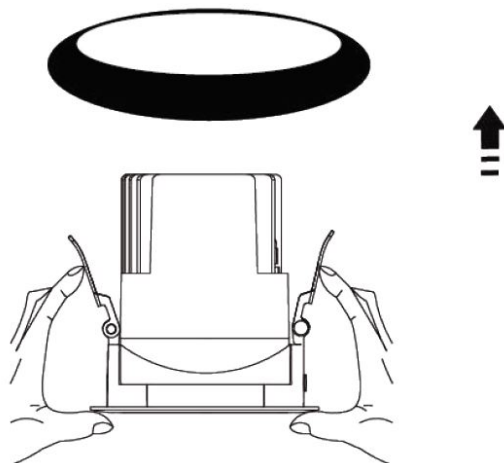

4.



SAFETY NOTES

- INSTALLATION BY SUITABLE TRAINED AND QUALIFIED PERSONAL ONLY.
- NEVER WORK WHEN VOLTAGE IS PRESENT ON THE FIXTURE
- IN THE CASE OF MALFUNCTIONS WITH THE FIXTURE PLEASE CONTACT LIGHT CULTURE
- LED MODULE RISK GROUP ONE
-  WARNING - RISK OF ELECTRIC SHOCK
- THE MAXIMUM PERMISSIBLE AMBIENT TEMPERATURE T_a OF THE LUMINAIRE MAY NOT BE EXCEEDED. EXCEEDING THIS TEMPERATURE REDUCES THE SERVICE LIFE AND, IN EXTREME CASES, EARLY FAILURE CAN OCCUR.

