



NEON CRYSTAL | ELECTRICAL AND PHYSICAL INSTALLATION GUIDE



COLOUR	CODE
WARM WHITE 2700 К +/- 145 К	BL-LS-5000-27
WARM WHITE 3000 K +/- 175 K	BL-LS-5000-30
NATURAL WHITE 4000 К +/- 275 к	BL-LS-5000-40
COOL WHITE 5700 К +/- 350 К	BL-LS-5000-57
2500 - 5000K TUNEABLE WHITE	BL-LS-5050
RED 620–630NM	BL-LS-5000-R
GREEN 520–530NM	BL-LS-5000-G
BLUE 465–475NM	BL-LS-5000-B
AMBER 588-594NM	BL-LS-5000-A
RGB	BL-LS-5100
RGBW	BL-LS-5150
RGB CHASING	BL-LS-5000-RGBC




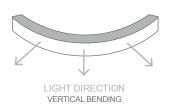

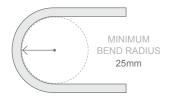


ELECTRICAL & OPTICAL DATA VARIANCE +/- 10% SOLD BY THE METRE IES FILES AVAILABLE


BENDING PARAMETERS

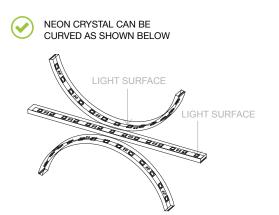


 Avoid bending LED Neon within the first unit (units are clearly marked with dashed lines on the sides of the product)

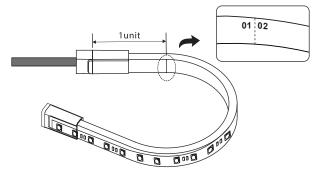

DO NOT TWIST THE LIGHT OR BEND AGAINST THE LIGHT SURFACE

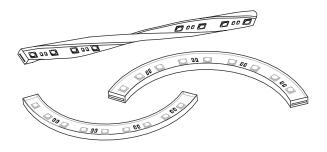


 LED Neon can be bent up to the defined "minimum bend radius" (25mm for Neon Crystal)

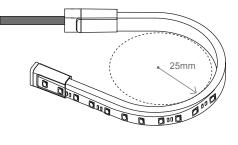

 $info@lightculture.com.au \mid \underline{www.lightculture.com.au}$



NEON CRYSTAL | ELECTRICAL AND PHYSICAL INSTALLATION GUIDE

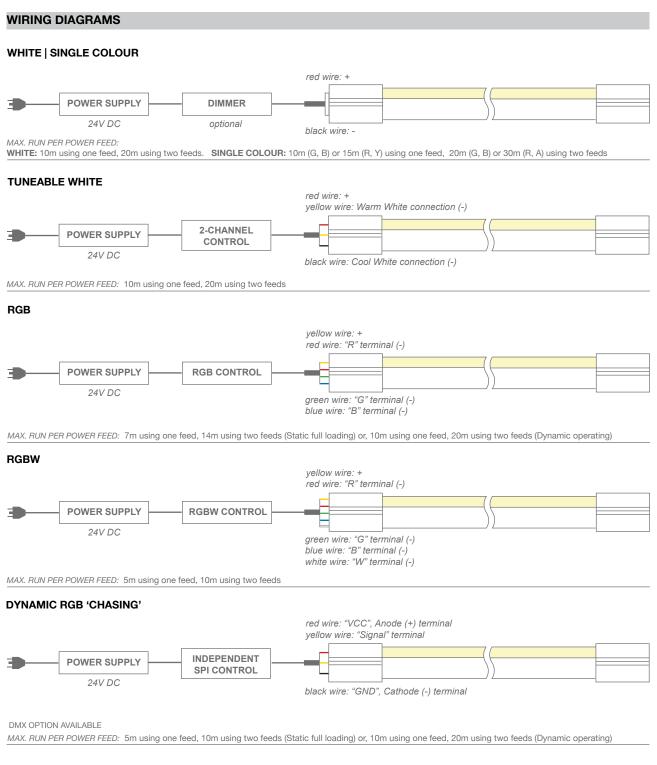

- LED Neon must always be used in conjunction with a certified 24V DC power supply.
- Check the polarity of the connector before inserting the front connector and switching on the mains power.
- To minimise voltage drop and ensure consistent light output, position the power supply near to the power feed end of the LED Neon, and keep the line as short as possible
- Ensure your maximum run per power feed adheres to the guidelines; see specification sheet.
- Ensure to add 20% buffer when selecting a power supply
- Before making any cuts, installation, maintenance, or connection, be sure the mains power is disconnected.
- If essential; cut and connect LED Neon correctly. Any incorrect operation can cause damage.
- All connector joints must be connected correctly to achieve connector IP rating.




NEON CRYSTAL | ELECTRICAL AND PHYSICAL INSTALLATION GUIDE

PROFILE INSTALLATION REQUIREMENTS

- Ensure the supply cord is not subject to mechanical stress
 - Keep 10–20mm distance between the end of the profile and the end mounting piece




- The bend angle should be less than 15 degrees when installing LED Neon into the profile by hand

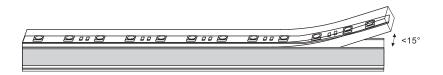

Avoid placing mechanical stress on the front connector cable
Do not curl or bend the front connector cable with excessive force



- Avoid installing the profile less than 10mm from the end mounting piece

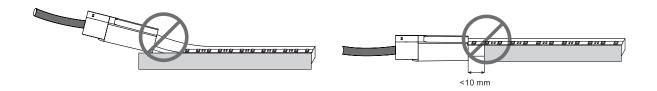

- Install the LED Neon into the profile in one direction, don't let it bow in the middle





NEON CRYSTAL | CONNECTIONS

SNAP CONNECTIONS - IP67

SUITABLE FOR OUTDOOR APPLICATIONS MUST BE FITTED CORRECTLY FOR IP67 RATING FEED CONNECTORS SUPPLIED AS 1M CABLE STANDARD, CHECK FOR ALTERNATE LENGTHS STANDARD INSTALLATION WITH SINGLE POWER FEED 01 + END CAP 02 OR FEED 02 + END CAP 01

DOUBLE POWER FEED: FEED 01 + FEED 02

1. 00


TOP END FEED




END CAP


FLEXIBLE CONNECTOR

	01	02		
WHITE	BL-LS-5010	BL-LS-5011	BL-LS-5012	BL-LS-5014
TUNEABLE	BL-LS-5051	BL-LS-5052		BL-LS-5053
SINGLE COLOUR	BL-LS-5010	BL-LS-5011		BL-LS-5014
RGB	BL-LS-5015	BL-LS-5016		BL-LS-5019
RGB CHASING	BL-LS-5020	BL-LS-5021		BL-LS-5024
RGBW		-		-

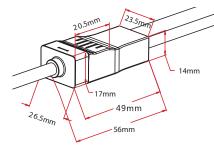

TOP END FEED

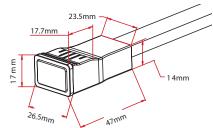

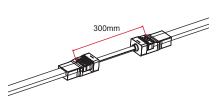

END CAP


FLEXIBLE CONNECTOR


 $info@lightculture.com.au \mid \underline{www.lightculture.com.au}$




NEON CRYSTAL | CONNECTIONS

SLIMLINE INJECTION MOULDING CONNECTIONS - IP65

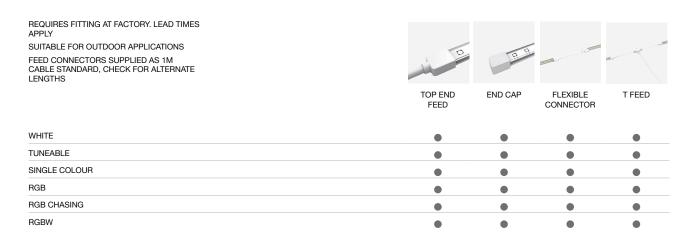


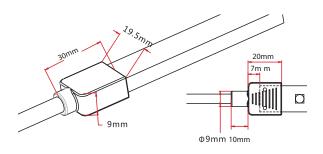

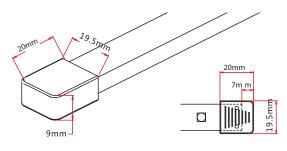


END CAP

TOP END FEED

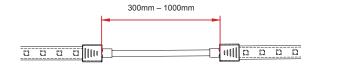

FLEXIBLE CONNECTOR

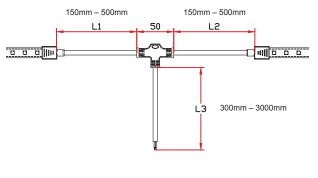


T-FEED

NEON CRYSTAL | MOUNTING ACCESSORIES

		······				
		L1	L2			
CODE	ACCESSORY		L1	L2	HOLE DIMENSIONS	HOLE NUMBER
BL-LS-5001	SELF-LOCKING ALUMINIUM PRO	OFILE 2m	100mm	200mm	Ø3.5mm	10
BL-LS-5002	SELF-LOCKING ALUMINIUM V2	MOUNTING CLIP 35mm	17.5mm	-	Ø3.5mm	1
BL-LS-5003	PLASTIC PROFILE 2m		100mm	200mm	Ø3.5mm	10

-8.8mm-

light culture

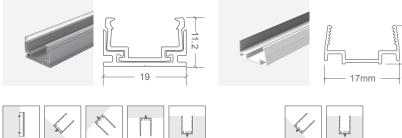

hor



PLASTIC PROFILE 2M

info@lightculture.com.au | <u>www.lightculture.com.au</u>

Š

PLASTIC AND ALUMINIUM

PROFILE / MOUNTING CLIP